
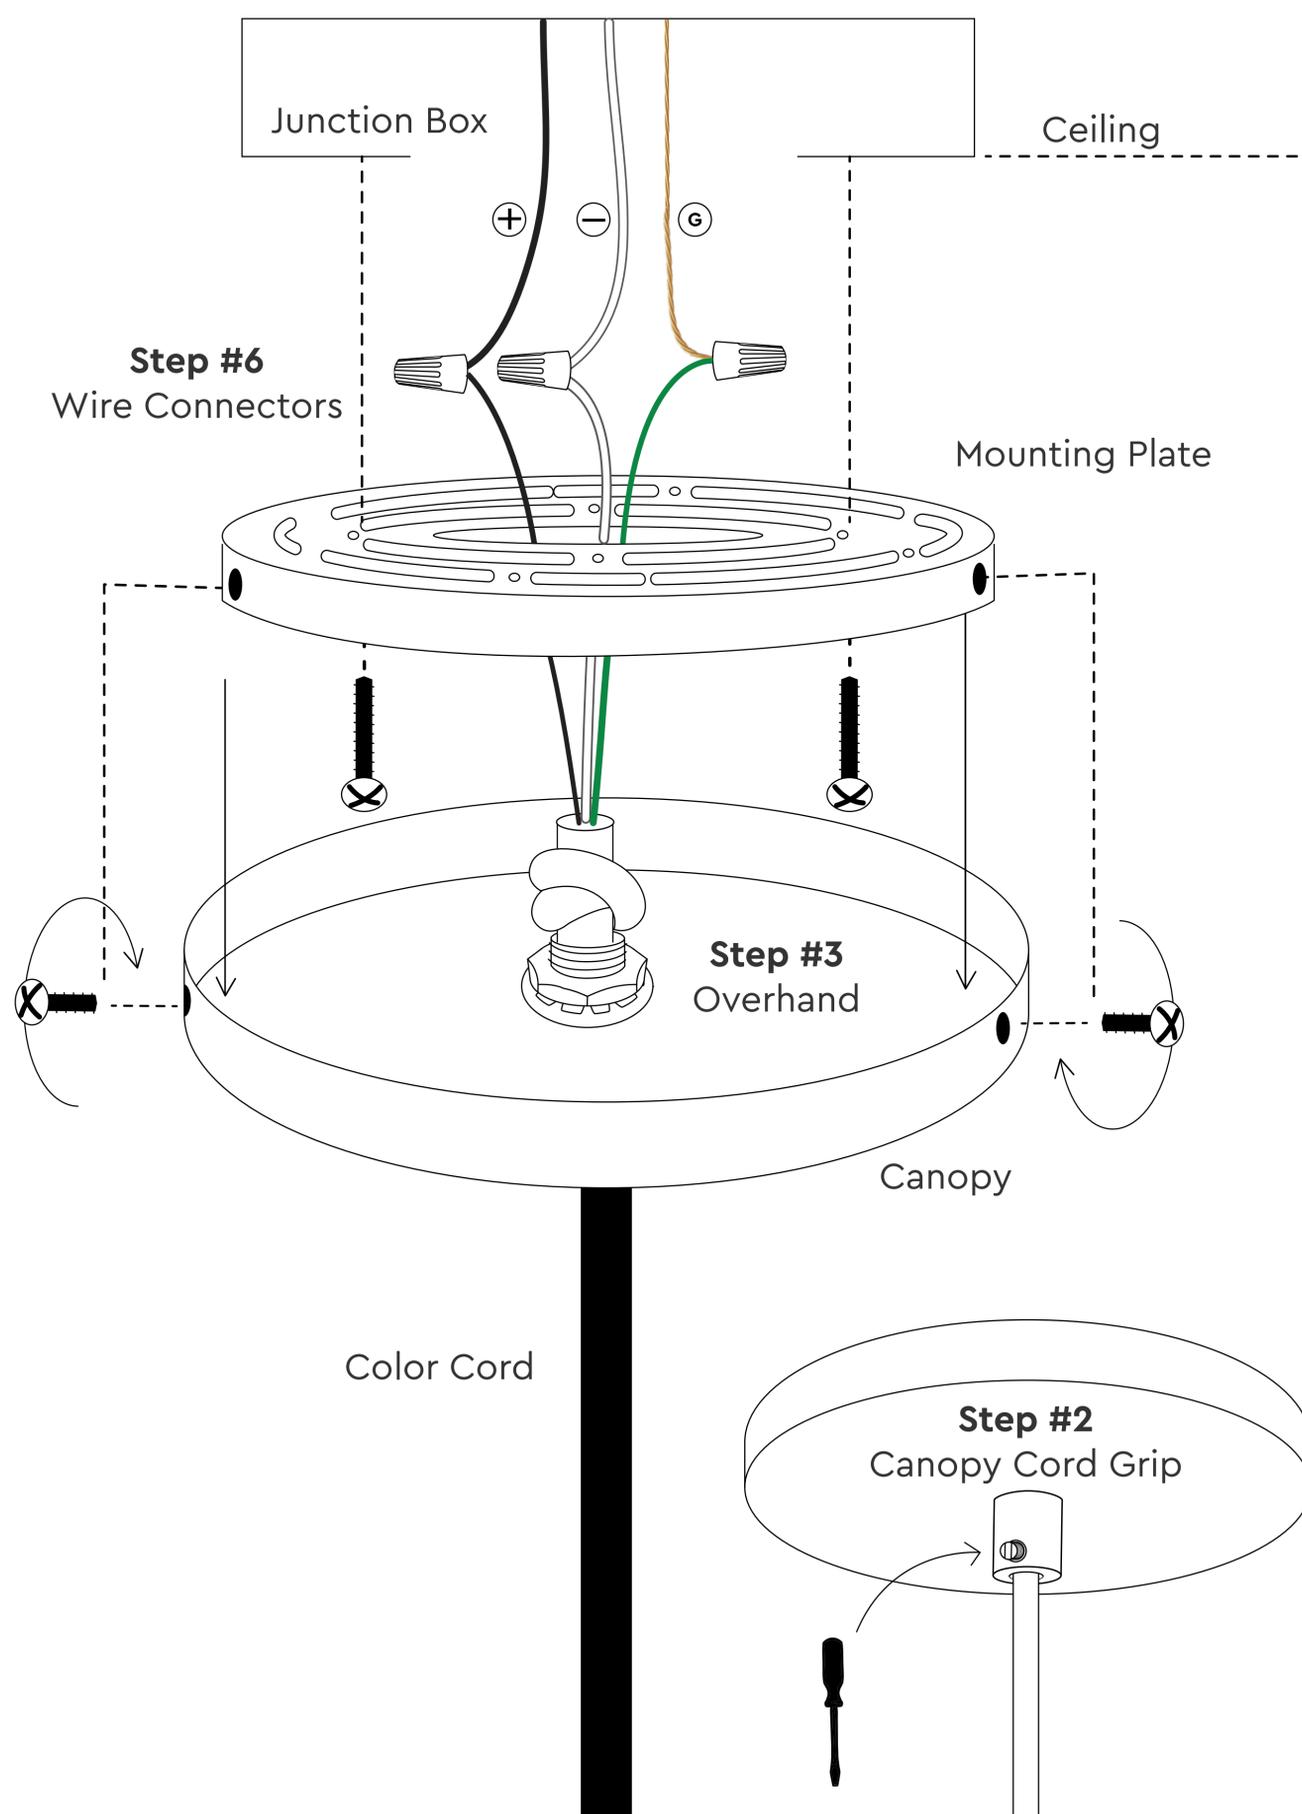


CANOPY INSTALLATION DIAGRAM

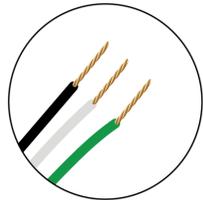

1. Turn off power circuit.
 2. Attach canopy grip to the canopy. Secure with lock washer and nut inside the canopy.
 3. Tie overhand knot inside the canopy.
 4. Locate the positive (black), negative (white) and ground (green or bare copper in the junction box) wires in the junction box and at the end of the cloth covered wire.
 5. Strip end of wires to expose the stranded copper wire.
- 
6. Connect matching wires with wire connectors and wrap secure with electrical tape.
 7. Secure mounting plate to ceiling.
 8. Secure canopy to mounting plate.
 9. Tighten the plastic set screw of the canopy cord grip firmly in to the color cord.

WARNING
Turn off power at circuit before wiring and always consult a licensed electrician.



Need more info? Visit our guides page at [COLORCORD.COM/PAGES/GUIDES](https://colorcord.com/pages/guides)

AIO SOCKET

EXPANDED VIEW INSTALLATION GUIDE

To attach shade:

1. Place shade rings and silicone washers on either side of the shade opening.
2. Insert socket into shade.
3. Tighten thread cover to socket until snug, do not over-tighten.

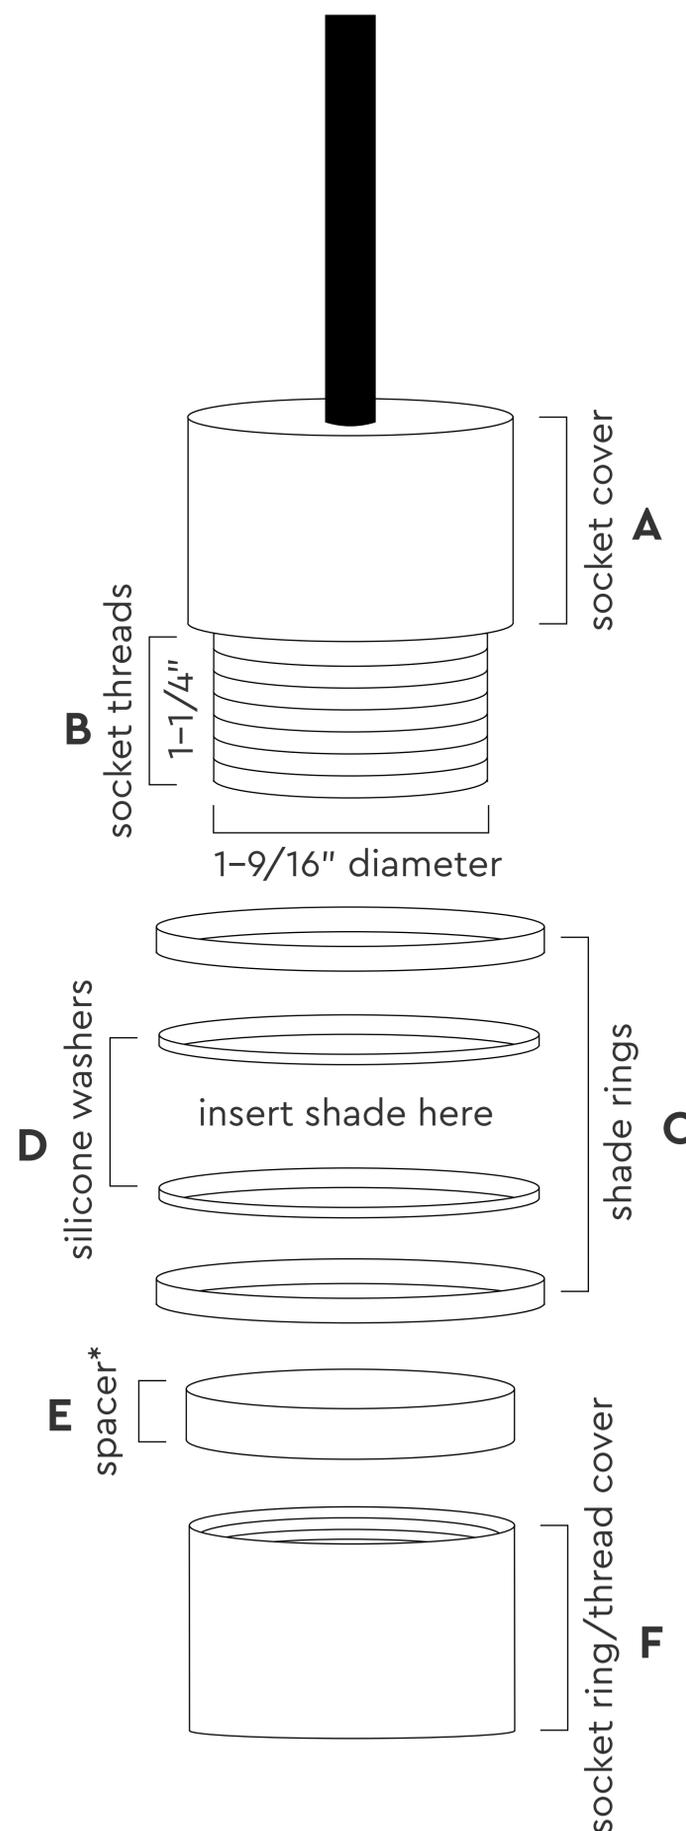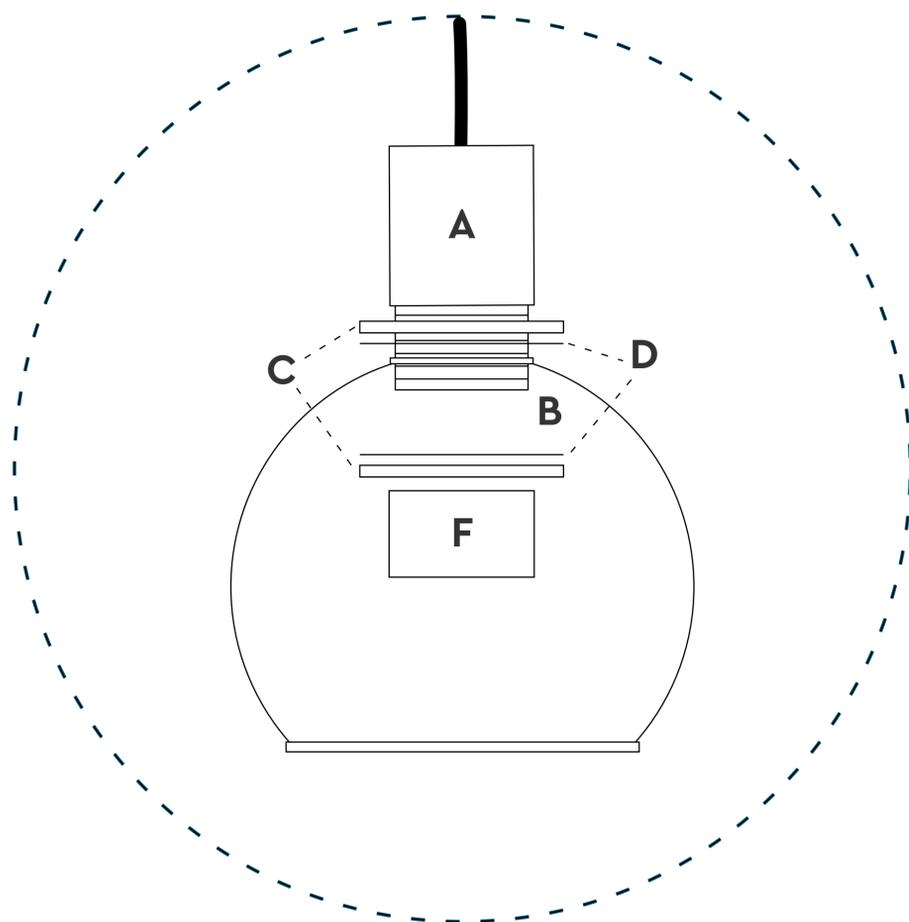

*for use with exposed bulb only



WARNING

Turn off power at circuit before wiring and always consult a licensed electrician.

Need more info? Visit our guides page at [COLORCORD.COM/PAGES/GUIDES](https://colorcord.com/pages/guides)



800-409-1070



colorcord.com



info@colorcord.com