
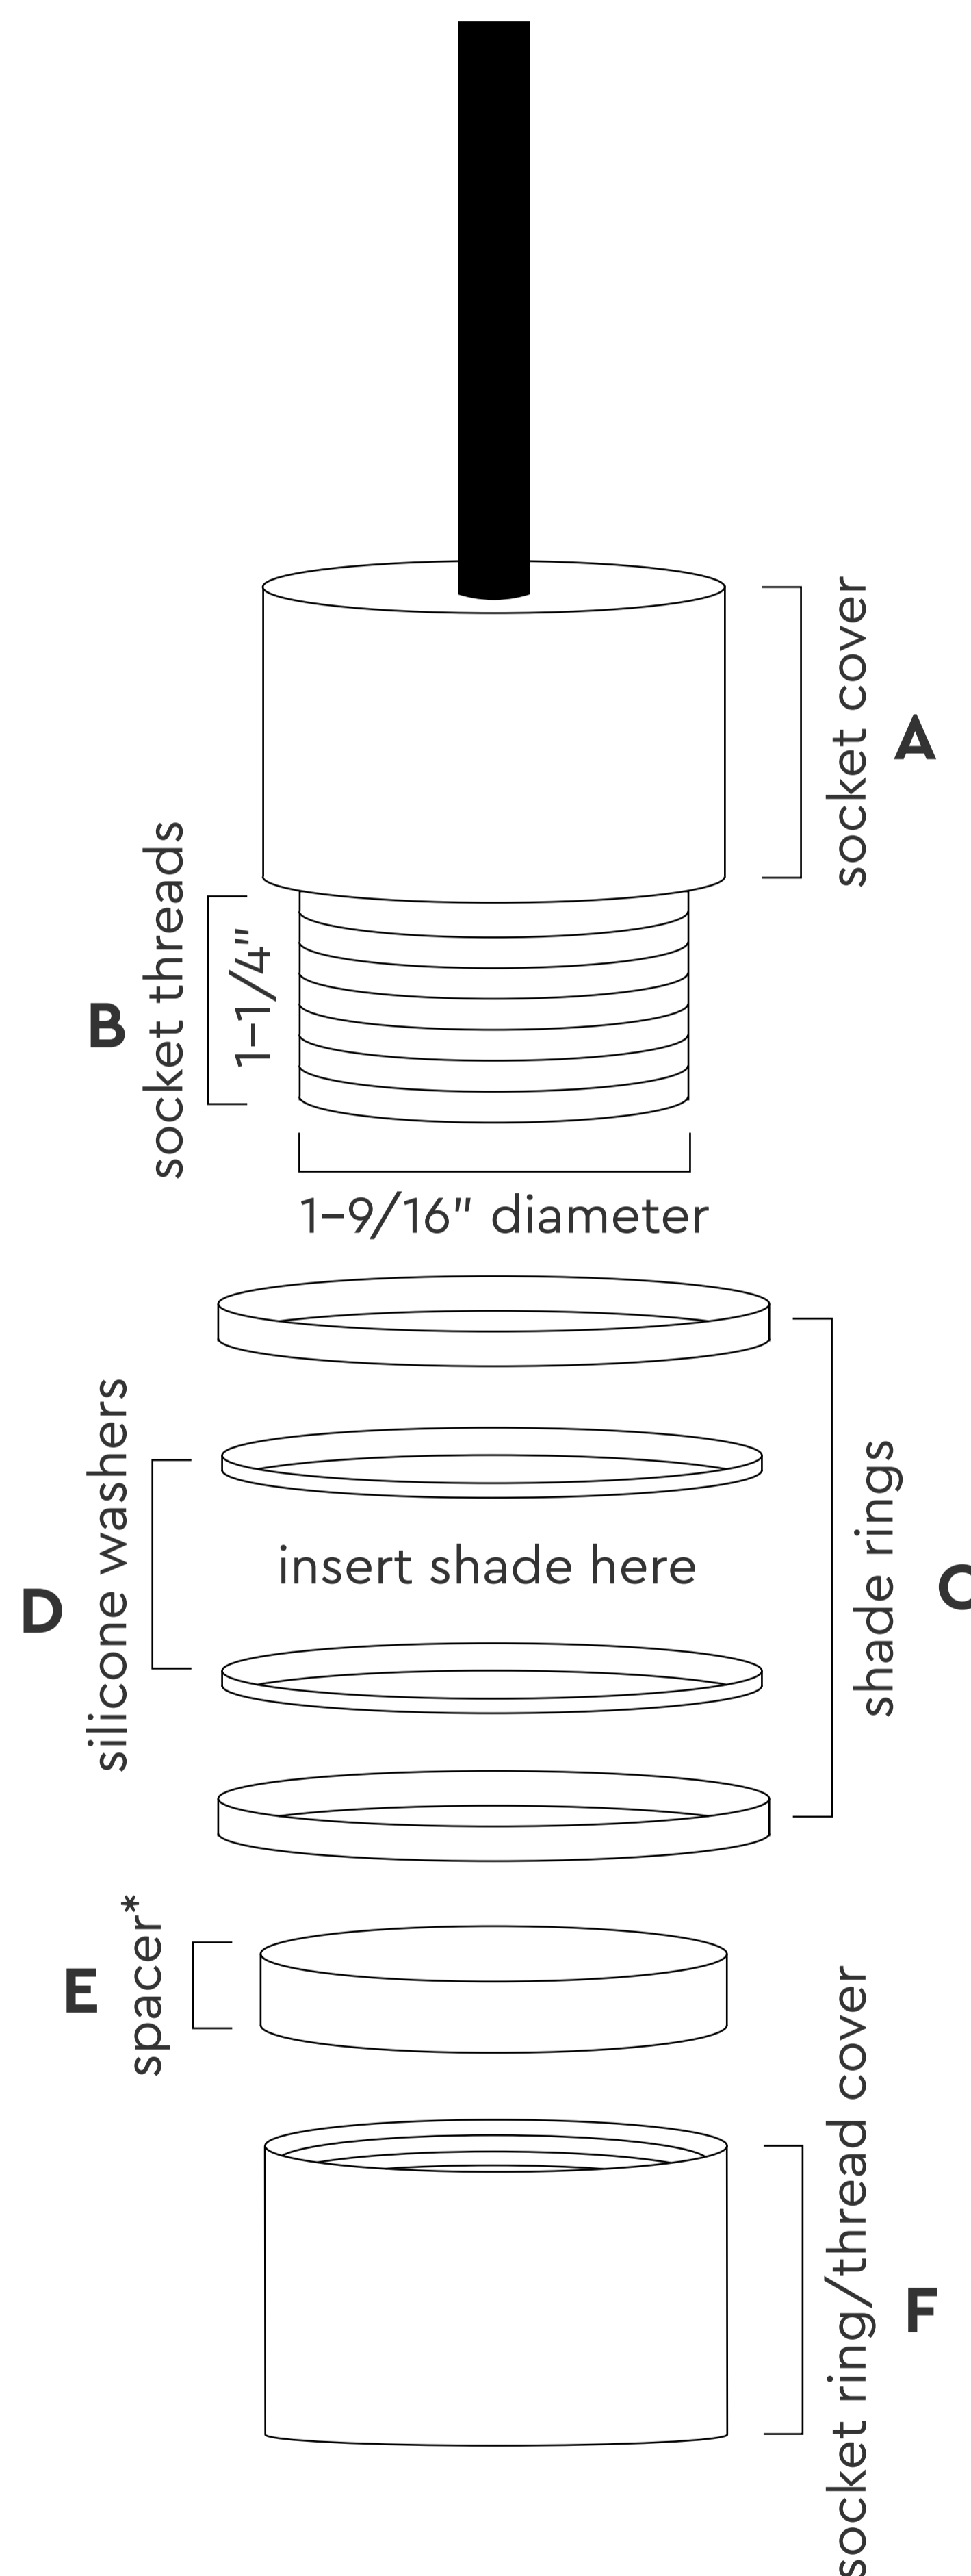


AIO SOCKET

EXPANDED VIEW INSTALLATION GUIDE

To attach shade:

1. Place shade rings and silicone washers on either side of the shade opening.
2. Insert socket into shade.
3. Tighten thread cover to socket until snug, do not over-tighten.

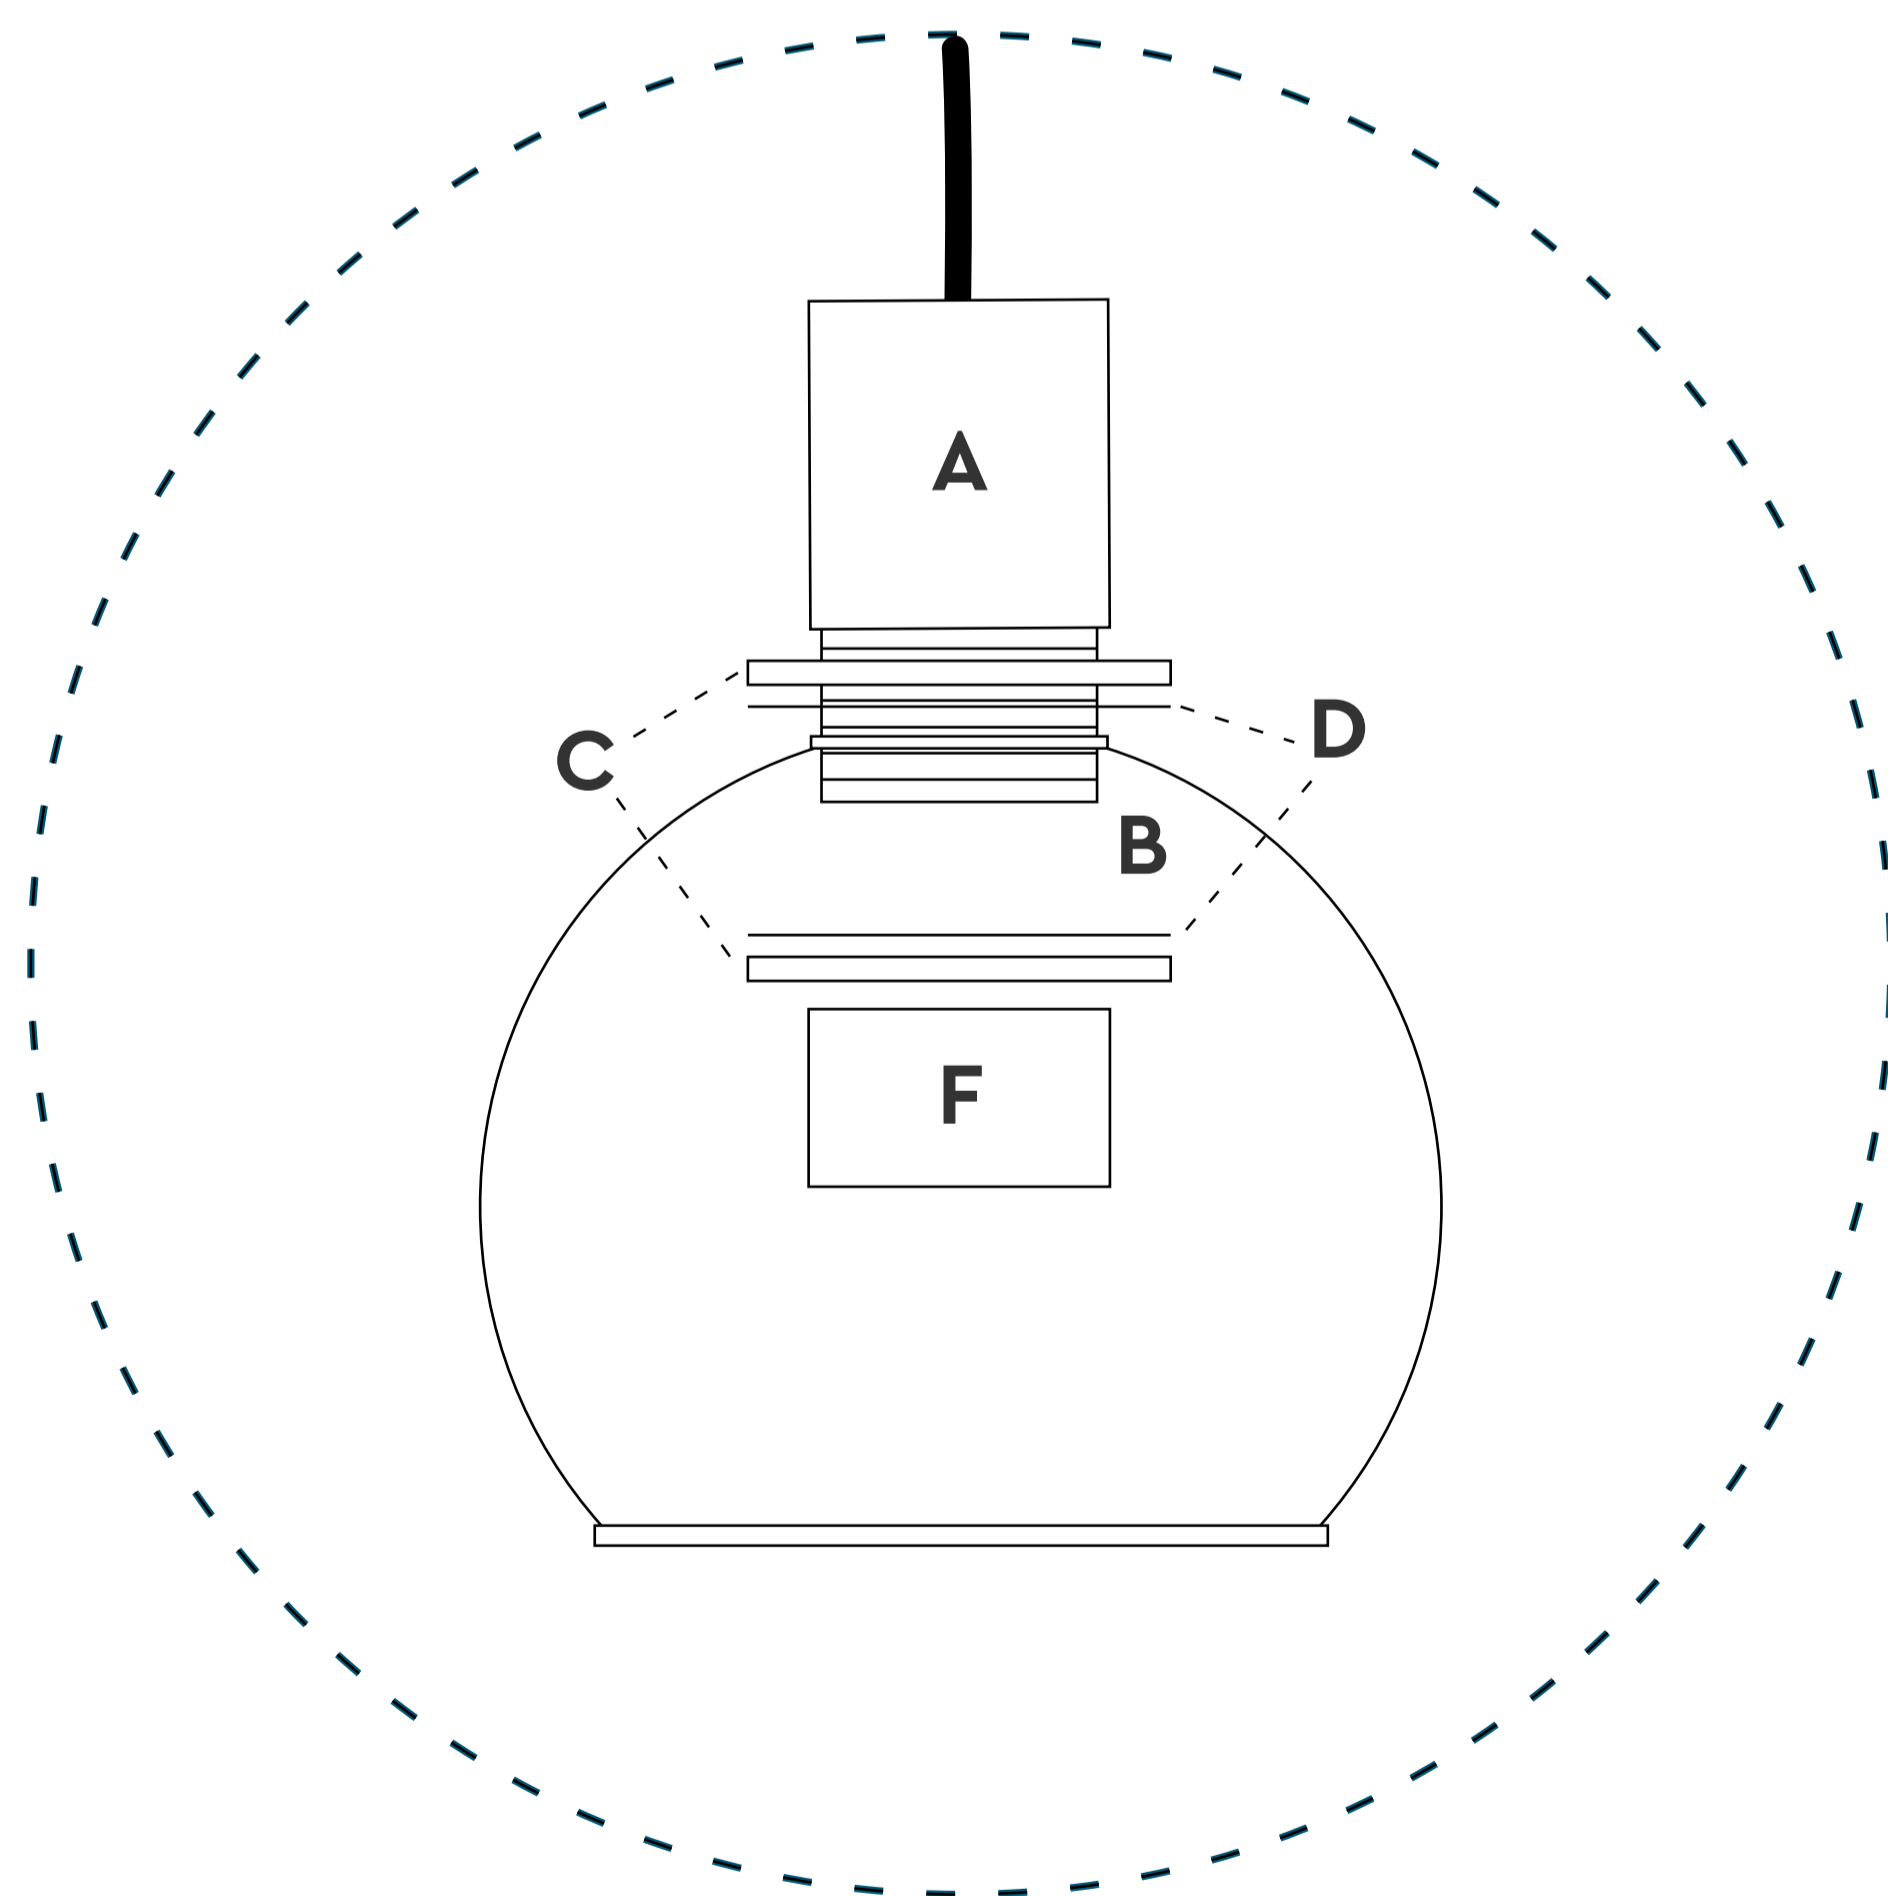


*for use with exposed bulb only



WARNING

Turn off power at circuit before wiring and always consult a licensed electrician.


Need more info? Visit our guides page at [COLORCORD.COM/PAGES/GUIDES](https://colorcord.com/pages/guides)

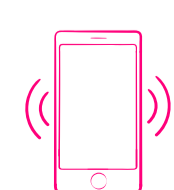

800-409-1070



colorcord.com

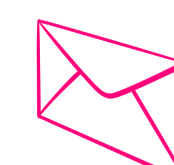

info@colorcord.com