


FLEUR PORCELAIN CANOPY INSTALLATION GUIDE

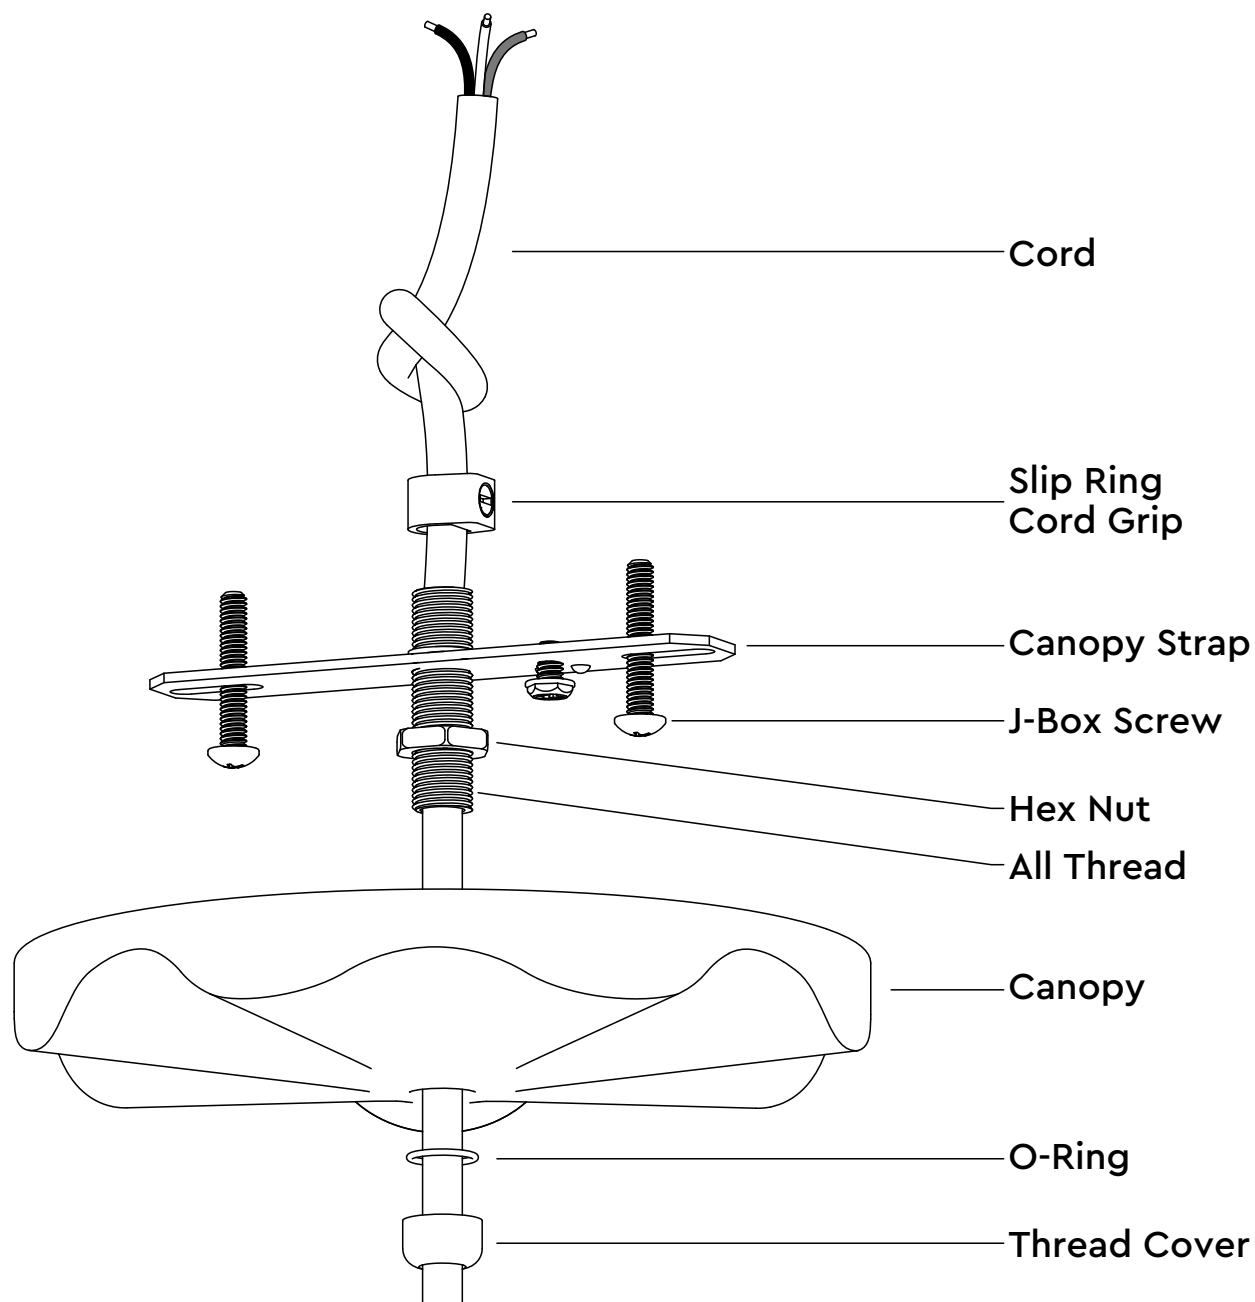

WARNING

Turn power off at circuit before wiring
and always consult a licensed electrician.

Need more info? Visit our guides page at colorcord.com/pages/guides




800-409-1070



colorcord.com



info@colorcord.com

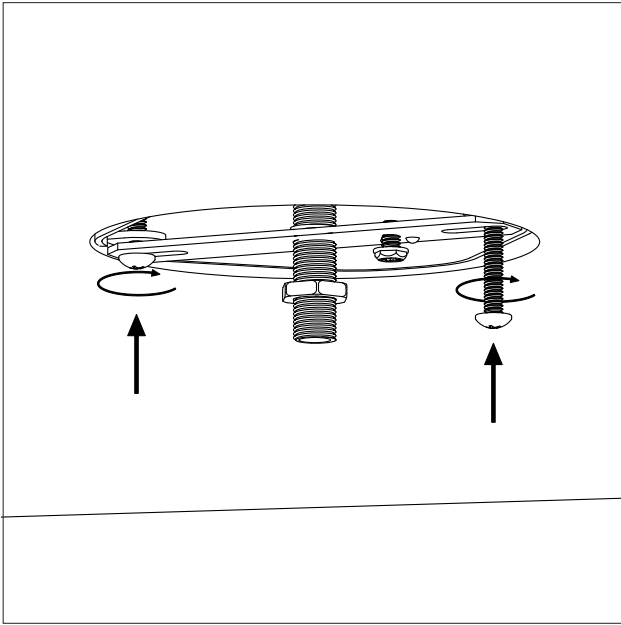


1. Turn power off at circuit.

Gather the following tools:

- #2 Phillips screw driver
- 1/8" flat head screw driver
- 13mm or 9/16" wrench
- wire strippers
- Color Cord 3000 wire stripping tool*


2. Thread the all thread and hex nut onto the canopy strap, leaving space between the hex nut and canopy strap. Firmly attach the cross bar assembly to the j-box using the provided j-box screws.

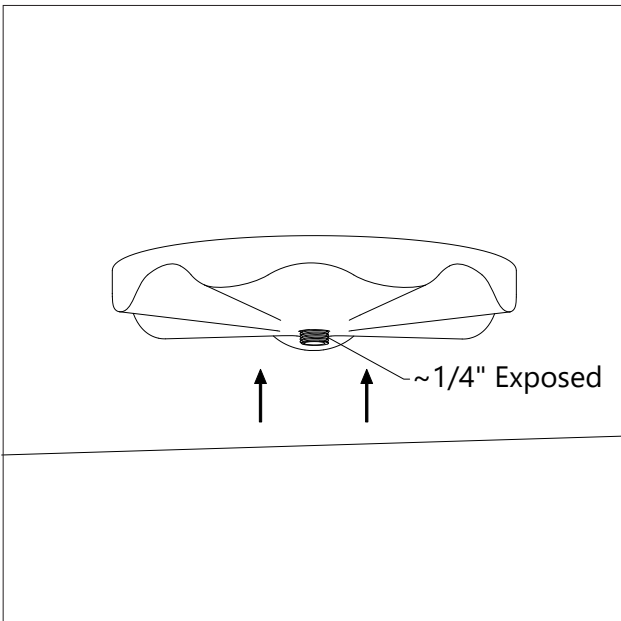

3. Perform a test fit of the canopy by pushing it flush to the ceiling over the all thread and covering the j-box opening. Leave approximately 1/4 inch of the all thread exposed past the canopy.


If the all thread is too short, rotate it left/counter-clockwise to lengthen it. If it is too long, rotate it right/clockwise to shorten it.

Remove the canopy by sliding it off the all thread.

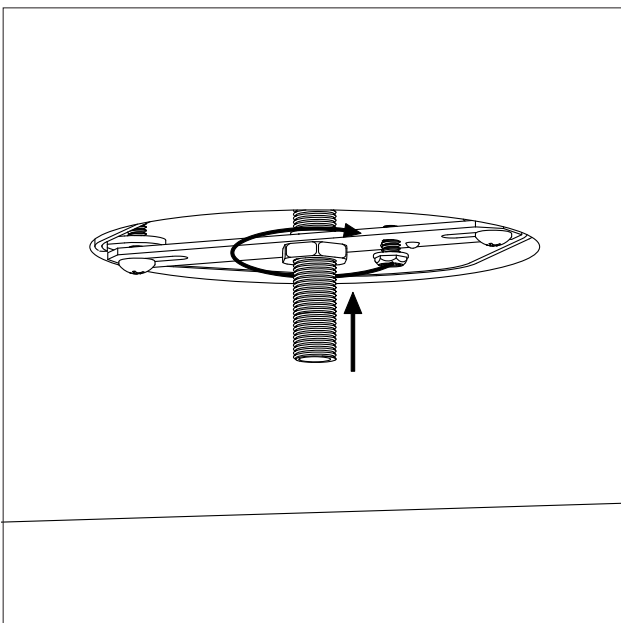


4. While holding the all thread in place, tighten the hex nut to the canopy strap using the wrench to lock the all thread in position.


*recommended

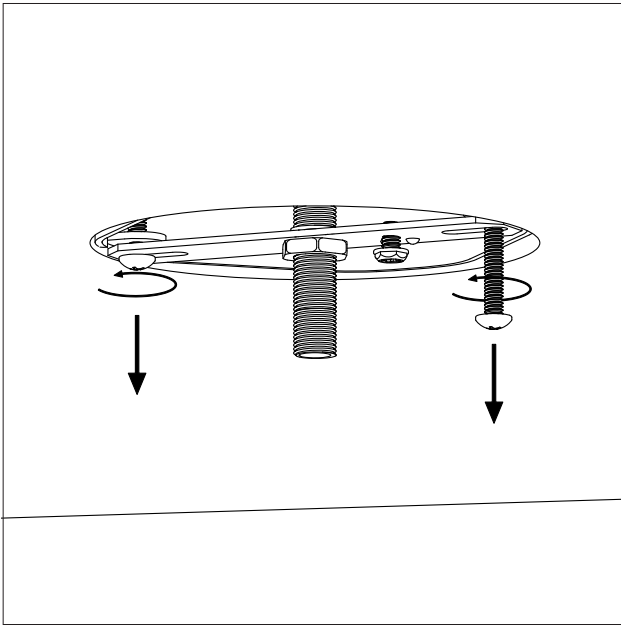


- 5.** Remove j-box screws from j-box and remove the cross bar assembly.

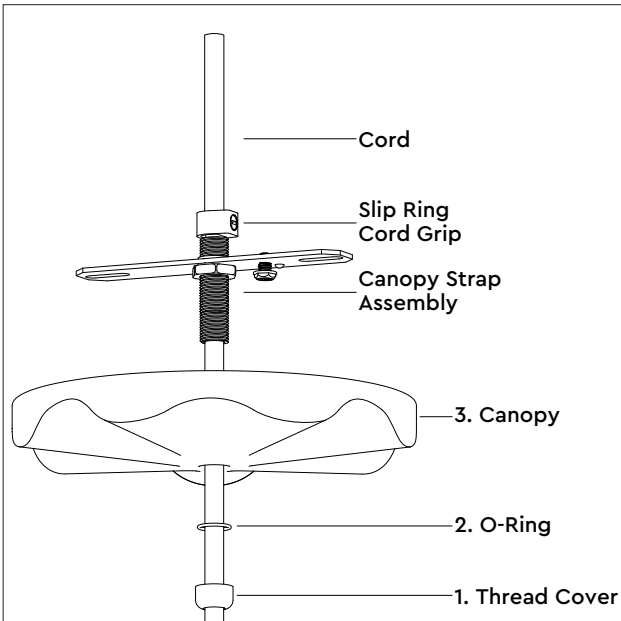

- 6.** Thread the cord through the canopy parts in this order:
1. Thread Cover
 2. O-Ring
 3. Porcelain Canopy
 4. Canopy Strap Assembly
 5. Slip Ring Cord Grip


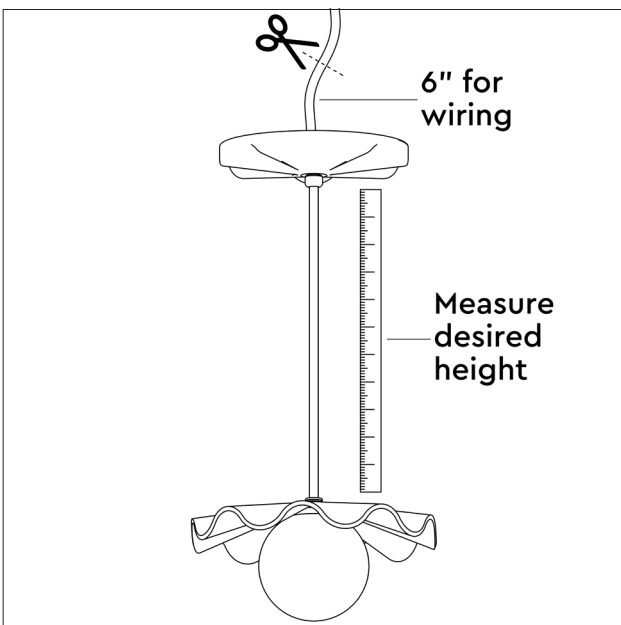


- 7.** Set the desired pendant height by sliding the slip ring strain relief to the top of the all thread and tightening the set screw with the $\frac{1}{8}$ " flat head screw driver.
- 8.** If needed, cut the excess cord to length leaving ~6" of cord to wire inside the j-box.

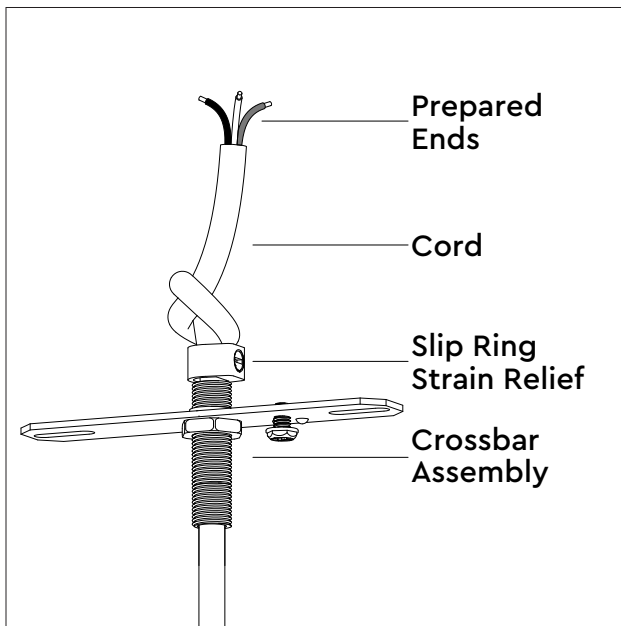


9. Tie an overhand knot above the slip ring cord grip to secure the pendant height in place. Strip ~4" of the cloth covered jacket and strip the single conductor wires until ~1/2" of exposed copper is visible.

View our tutorial on cutting and stripping fabric covered wire here:

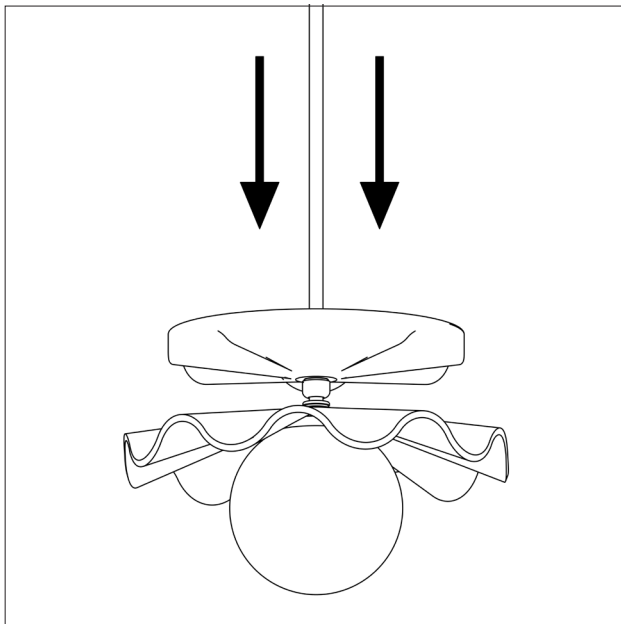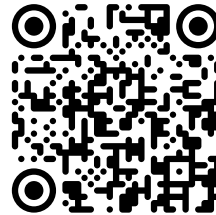


10. Slide the canopy and crossbar assembly down the cord until it rests on top of the pendant.

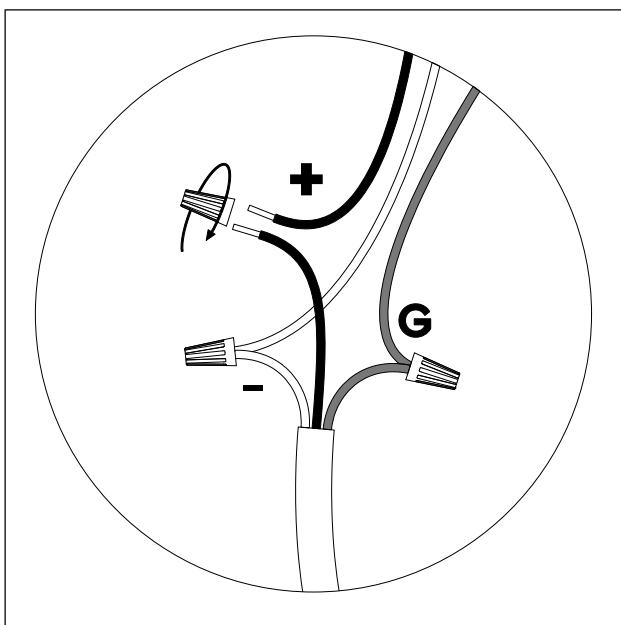


ATTENTION!

It is highly recommended for another person to hold the pendant for the rest of this installation.

11. Locate the positive (black), negative (white), and ground (green or bare copper) wires in the j-box and at the end of the fixture. Connect matching wires with the included wire nuts and wrap secure with electrical tape.

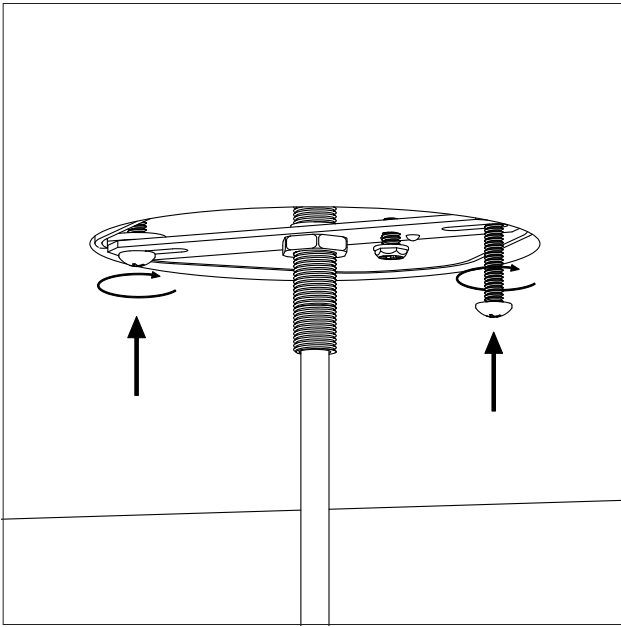


- 12.** Firmly secure the crossbar to the j-box using the j-box screws.

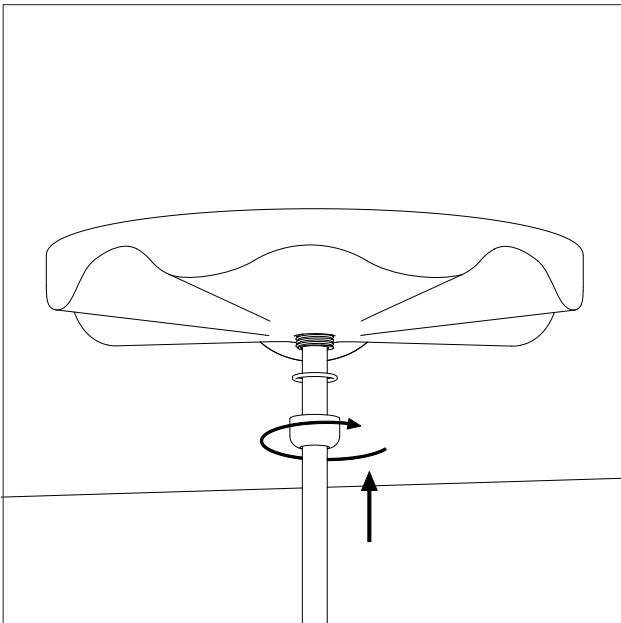


- 13.** Slide the canopy over the all thread and hold in place flush to the ceiling.

- 14.** Slide the o-ring over the all thread then thread on the thread cover until tight and the canopy remains in place.

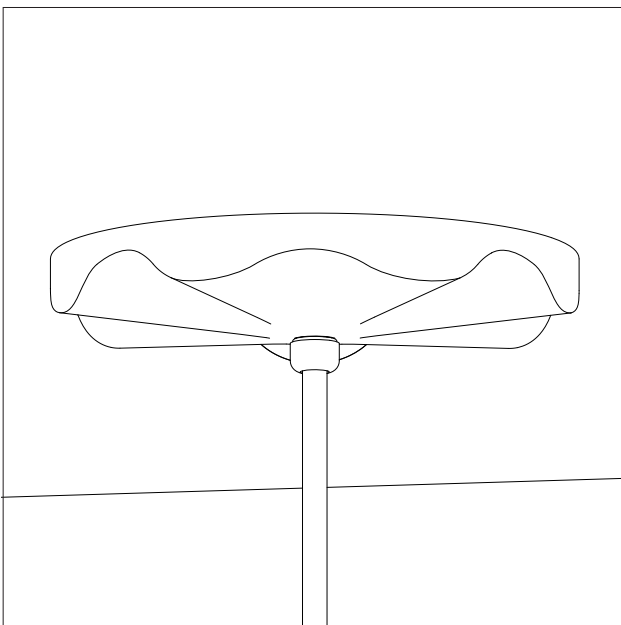


- 15.** Canopy installation is now complete. Return power to circuit and turn on your light.

THREADPOINT LED REPLACEMENT DIAGRAM

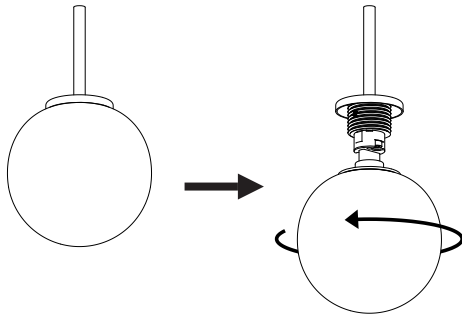


1. Turn power off at circuit.

2. Remove diffuser by rotating it left / counter-clockwise.

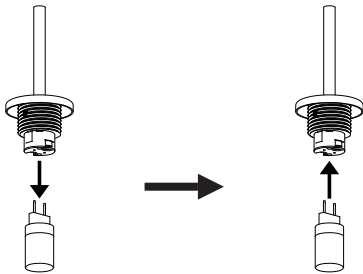

3. Pull G8 LED straight and away from socket.

4. Align new G8 LED prongs with socket terminals and insert LED until it stops.

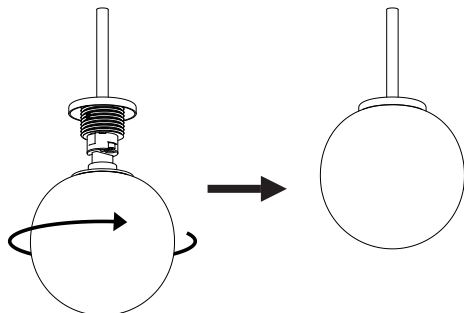

5. Thread on diffuser by rotating it right / clockwise until snug. **DO NOT OVER TIGHTEN!**

6. Return power to circuit and turn on your light.

DO NOT OVER TIGHTEN!



WARNING

Turn power off at circuit before wiring and always consult a licensed electrician.

Need more info? Visit our guides page at colorcord.com/pages/guides



800-409-1070



colorcord.com



info@colorcord.com