



LOW PROFILE CANOPY INSTALLATION DIAGRAM

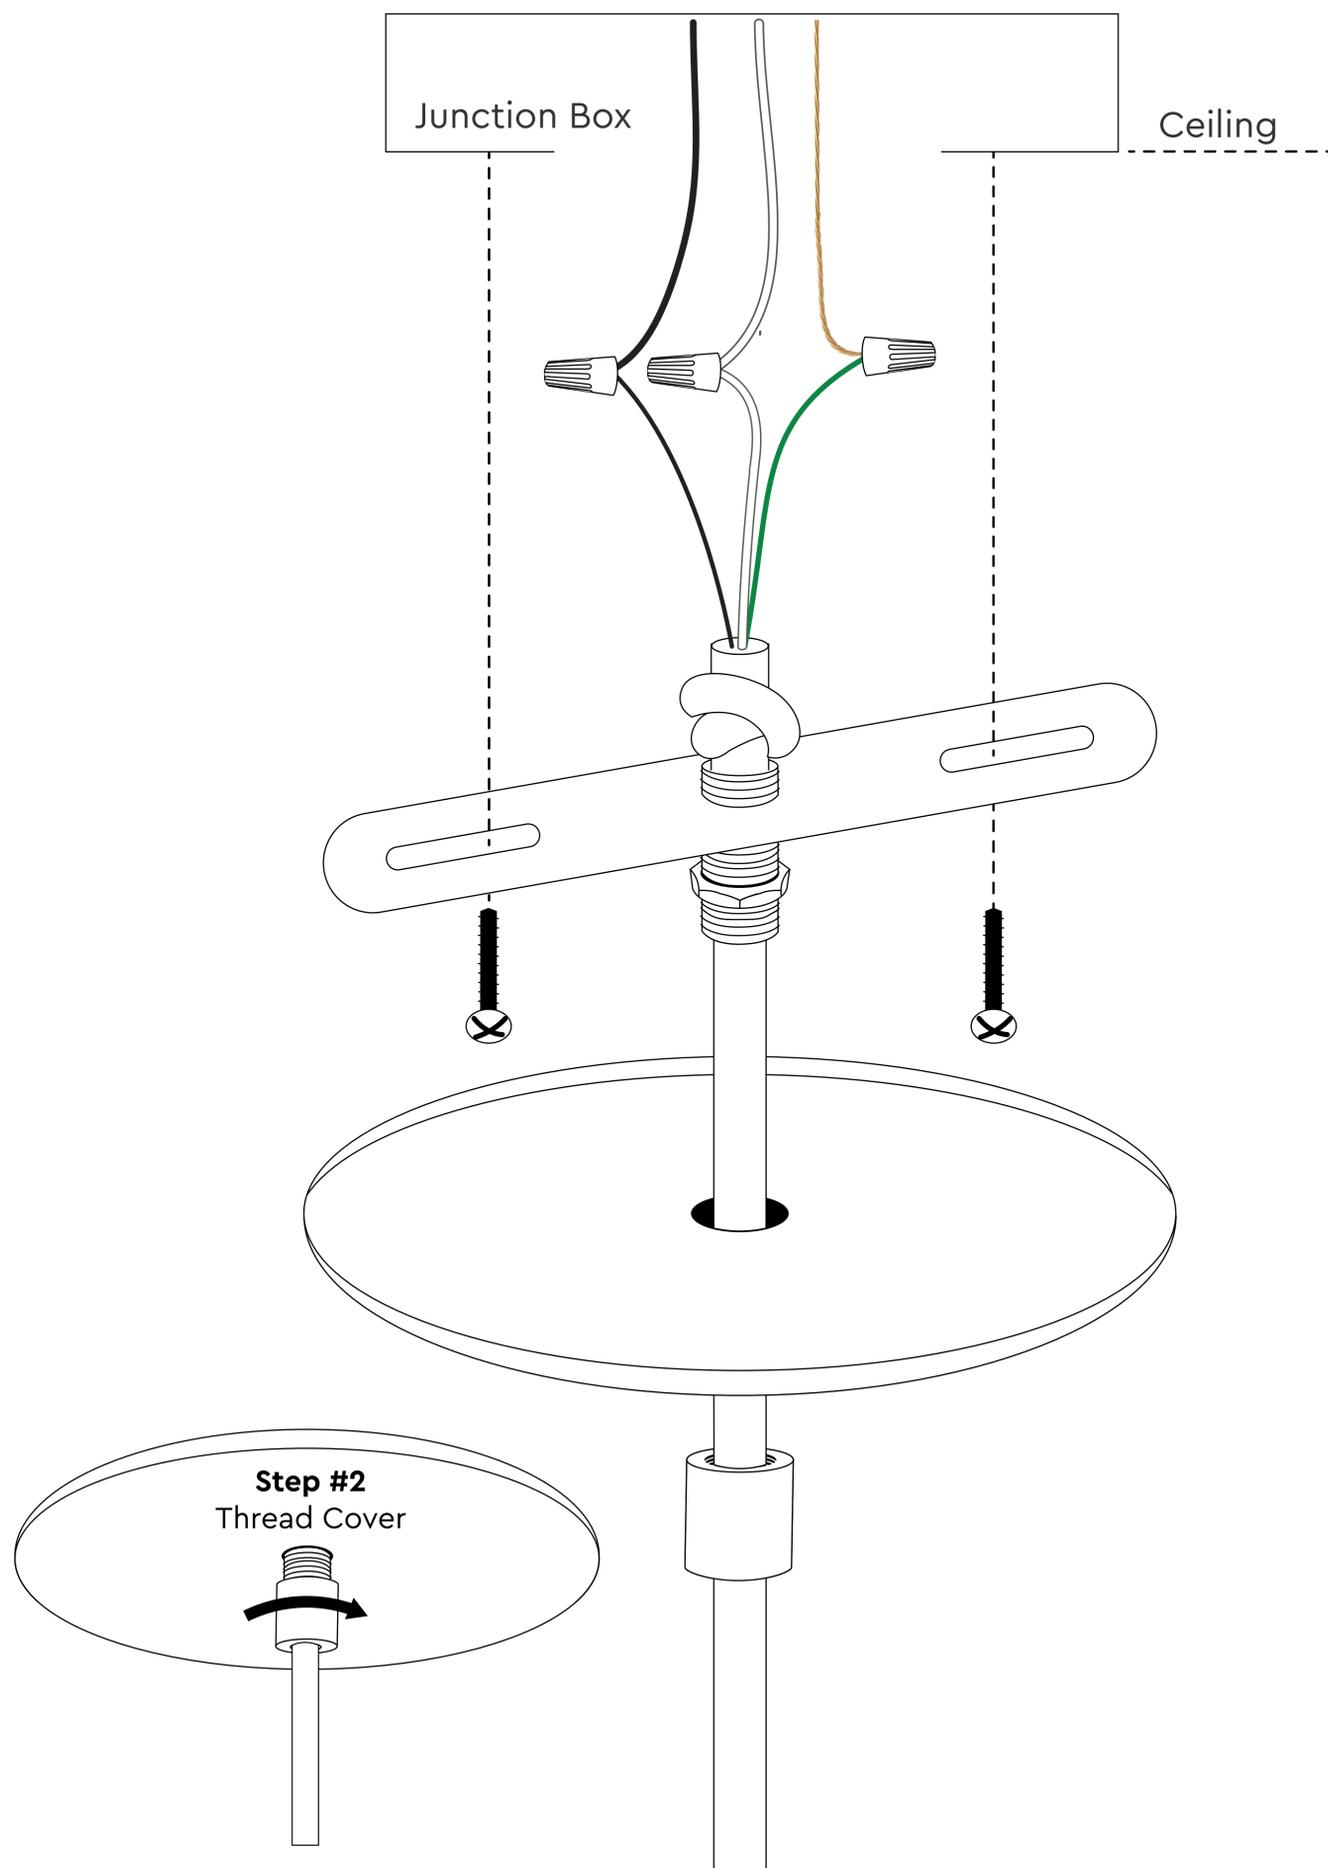

- 1.** Turn off power circuit.
 - 2.** Thread cord through thread cover, canopy, nut, and all-thread, in that order. Tie overhand knot.
 - 3.** Locate the positive (black), negative (white) and ground (green or bare copper in the junction box) wires in the junction box and at the end of the cloth covered wire.
 - 4.** Strip end of wires to expose the stranded copper wire.
- 
- 5.** Connect matching wires with wire connectors and wrap secure with electrical tape.
 - 6.** Secure mounting strap to ceiling.
 - 7.** Push canopy into mounting strap, leaving enough all thread to attach thread cover.
 - 8.** Secure canopy to mounting plate using thread cover.

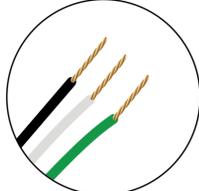

WARNING

Turn off power at circuit before wiring and always consult a licensed electrician.

Need more info? Visit our guides page at [COLORCORD.COM/PAGES/GUIDES](https://colorcord.com/pages/guides)



800-409-1070



colorcord.com



info@colorcord.com