



SWAG HOOK INSTALLATION GUIDE

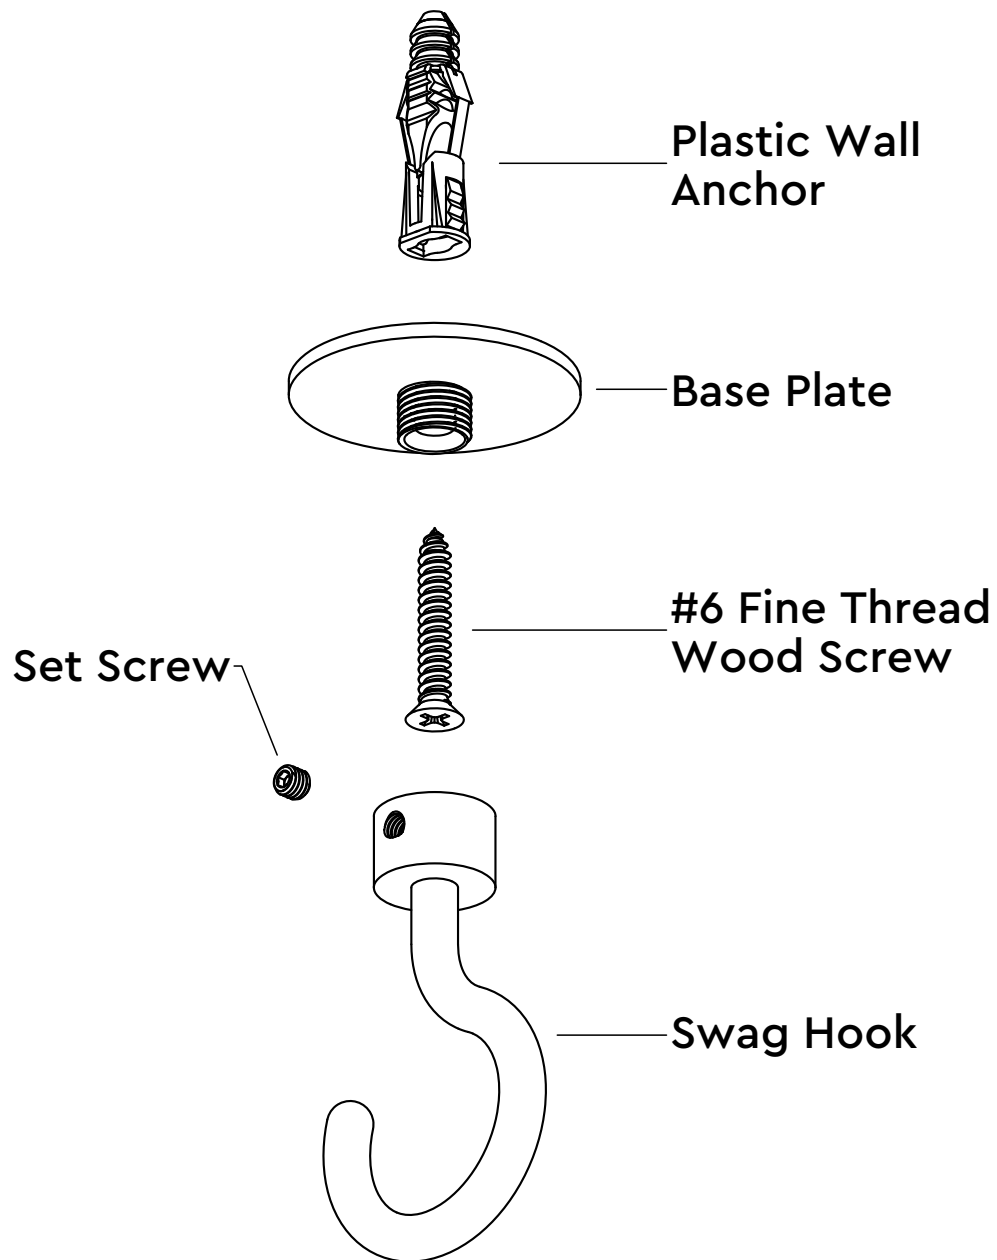


Need more info? Visit our guides page at colorcord.com/pages/guides

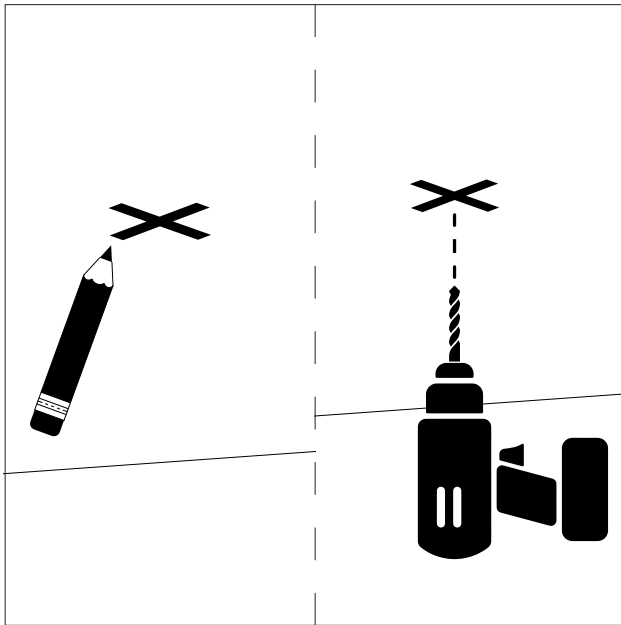


1. Measure and mark the spot where you want to hang your swag hook with a pencil.

2. Drill a hole at your mark using a 1/4" drill bit.

Note: The included anchor is designed for drywall. If installing into plaster, wood, tile, or another surface, use an anchor appropriate for your wall material. Make sure any replacement anchor is compatible with a #6 screw.

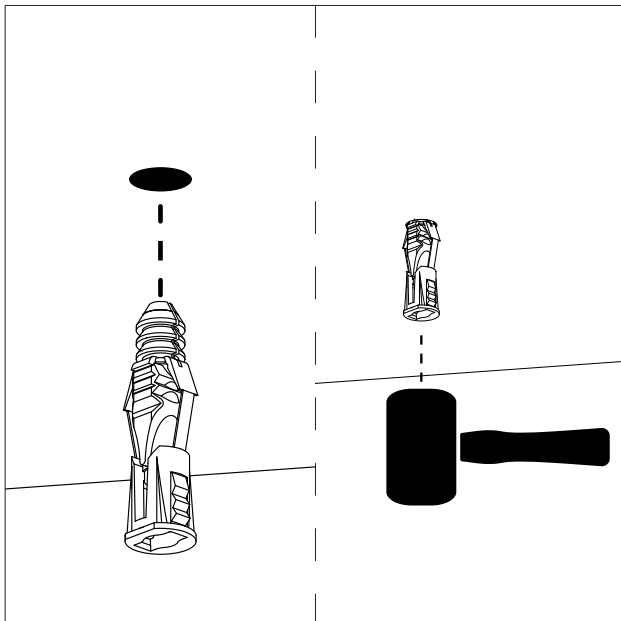


3. Push the drywall anchor into the hole, making sure to insert it straight. Gently tap it in with a hammer or mallet until the flange sits flush against the surface.

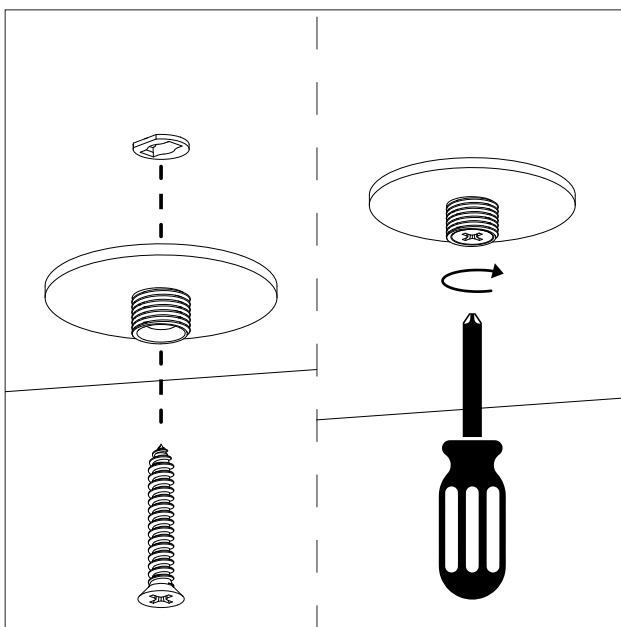


4. Place your swag hook base over the hole and drive in the provided screw until tight.


Note: The screw head will sit flush with the base before the anchor is fully engaged — keep tightening until very secure.

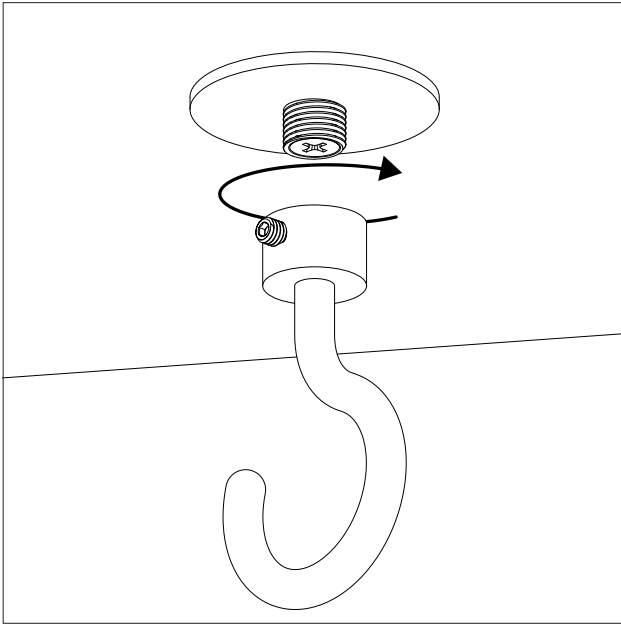

- 4.** Loosen the set screw on the side of your swag hook so that it doesn't interfere with the base plate threads. Thread on your swag hook until flush with the base plate.

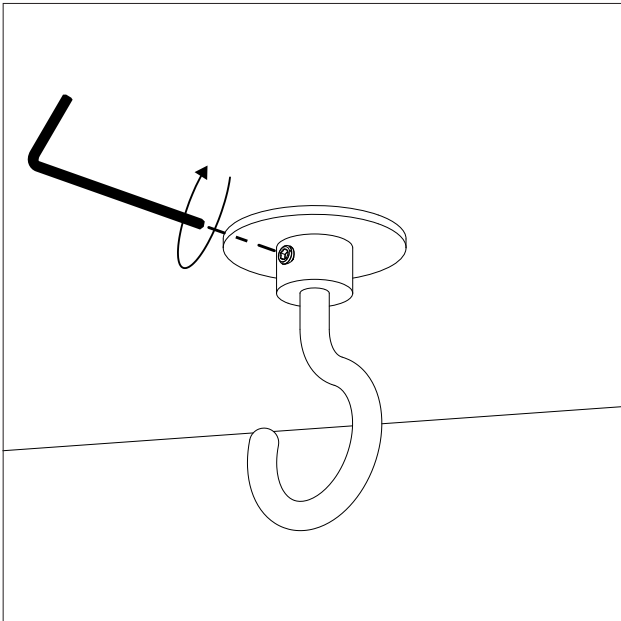

- 5.** Lock the swag hook in place by tightening the set screw using the provided allen wrench.

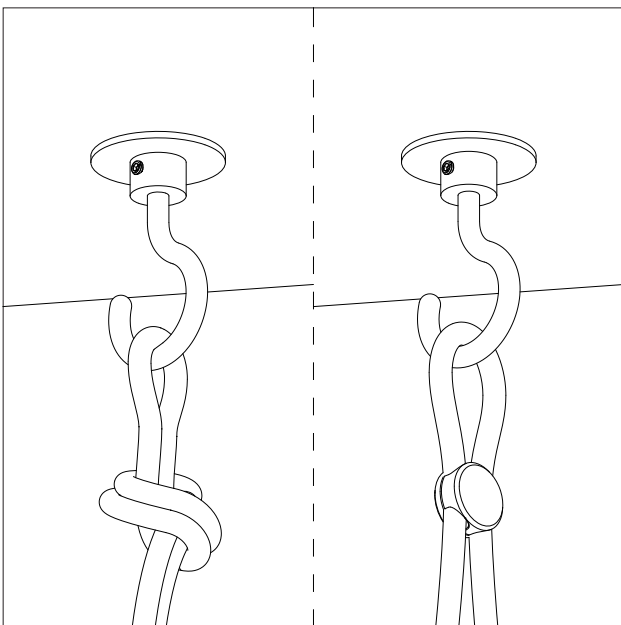

- 6.** Tie a knot or use one of our cord clips to hang your pendant from the swag hook.



WARNING: Do not exceed 10 lbs.