



THREADPOINT LED REPLACEMENT DIAGRAM

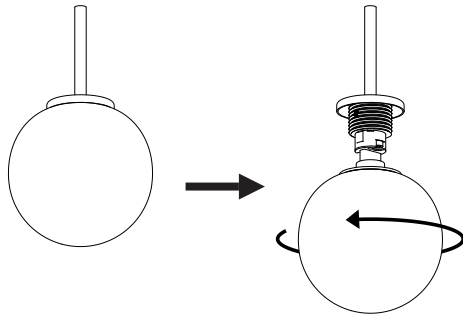


1. Turn power off at circuit.

2. Remove diffuser by rotating it left / counter-clockwise.

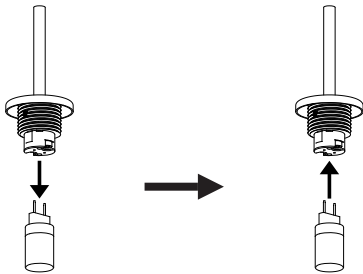

3. Pull G8 LED straight and away from socket.

4. Align new G8 LED prongs with socket terminals and insert LED until it stops.

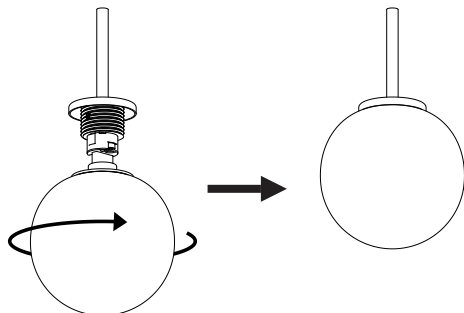

5. Thread on diffuser by rotating it right / clockwise until snug. **DO NOT OVER TIGHTEN!**

6. Return power to circuit and turn on your light.

DO NOT OVER TIGHTEN!



WARNING

Turn power off at circuit before wiring
and always consult a licensed electrician.

Need more info? Visit our guides page at colorcord.com/pages/guides



800-409-1070



colorcord.com



info@colorcord.com